




Exprimidor lento Plus

# Manual

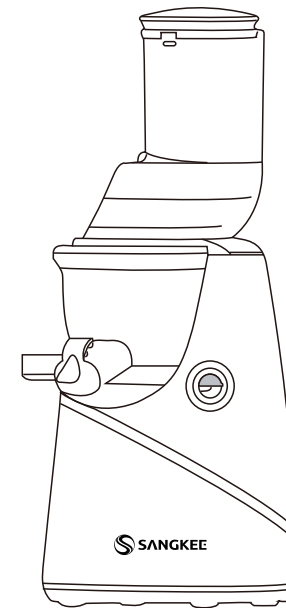

Modelo: K100024

Lea el manual con atención y consérvelo para futuras consultas.

En primer lugar, gracias por elegir el EXPRIMIDOR LENTO SANGKEE.

Lea este manual detenidamente antes de utilizar el dispositivo. Guarde el manual para uso futuro. Estas guías están diseñadas para ayudarlo a maximizar completamente el uso del producto.


## ESPECIFICACIONES

Nombre del producto:	Slow Juicer Plus
Voltaje nominal:	120 V CA
Frecuencia nominal:	60 Hz.
Potencia nominal:	250 W
RPM:	45 rpm
Uso estándar:	menos de 30 minutos continuos

## REGLAS DE SEGURIDAD

- No enchufar ni desenchufar con las manos mojadas. · No utilizar otro que no sea de 120 V CA
  - Enchufe el cable de alimentación correctamente y empújelo firmemente en un enchufe de pared.
  - No altere nunca el aparato. Además, no lo desmonte ni repare usted mismo.
  - El aparato puede ser utilizado por personas con discapacidades físicas, sensoriales o capacidades mentales o falta de experiencia y conocimiento si se les ha supervisado o instruido acerca del uso del aparato de una manera segura y si comprenden los peligros involucrados. Los niños no deben jugar con el aparato. Los niños no deben realizar la limpieza y el mantenimiento del usuario sin supervisión. Este aparato no debe ser utilizado por niños. Mantenga el aparato y su cable fuera del alcance de los niños. Si el cable de alimentación está dañado, debe ser reemplazado por el servicio del fabricante o una persona calificada similar para evitar peligros.
  - Cuando el cable de alimentación, el cable se rompa o se dañe o la parte del enchufe se suelte, no lo utilice.
  - La base del motor no se puede sumergir en agua ni en ningún otro líquido. No opere con las manos mojadas.
  - No desmonte nunca la cámara durante el funcionamiento ni introduzca los dedos, objetos extraños como tenedores, cucharas, etc. en el tubo de llenado o la salida de zumo. · Coloque el aparato sobre una superficie plana y estable.
  - Desenchufe siempre el aparato después de su uso. Desconecte siempre el aparato del suministro si se deja desatendido y antes de montar, desmontar o limpiar. Al desenchufar el cable de alimentación, asegúrese de sujetarlo. Asegúrese de que todas las piezas estén ensambladas correctamente antes de encender el aparato.
  - El uso al aire libre puede ser peligroso.
  - Nunca deje que el aparato funcione sin vigilancia.
  - Nunca introduzca los dedos en el tubo de alimentación ni con ningún otro objeto mientras el aparato está funcionando.
  - Cuando coloque ingredientes en el tubo de llenado, use únicamente el prensador provisto.
  - Este aparato está diseñado para uso doméstico únicamente.
- El aparato puede funcionar durante un máximo de 30 minutos sin parar tanto para frutas, como manzana o pera, y también para frutas y verduras duras, como

## PARTES DEL EXPRIMIDOR

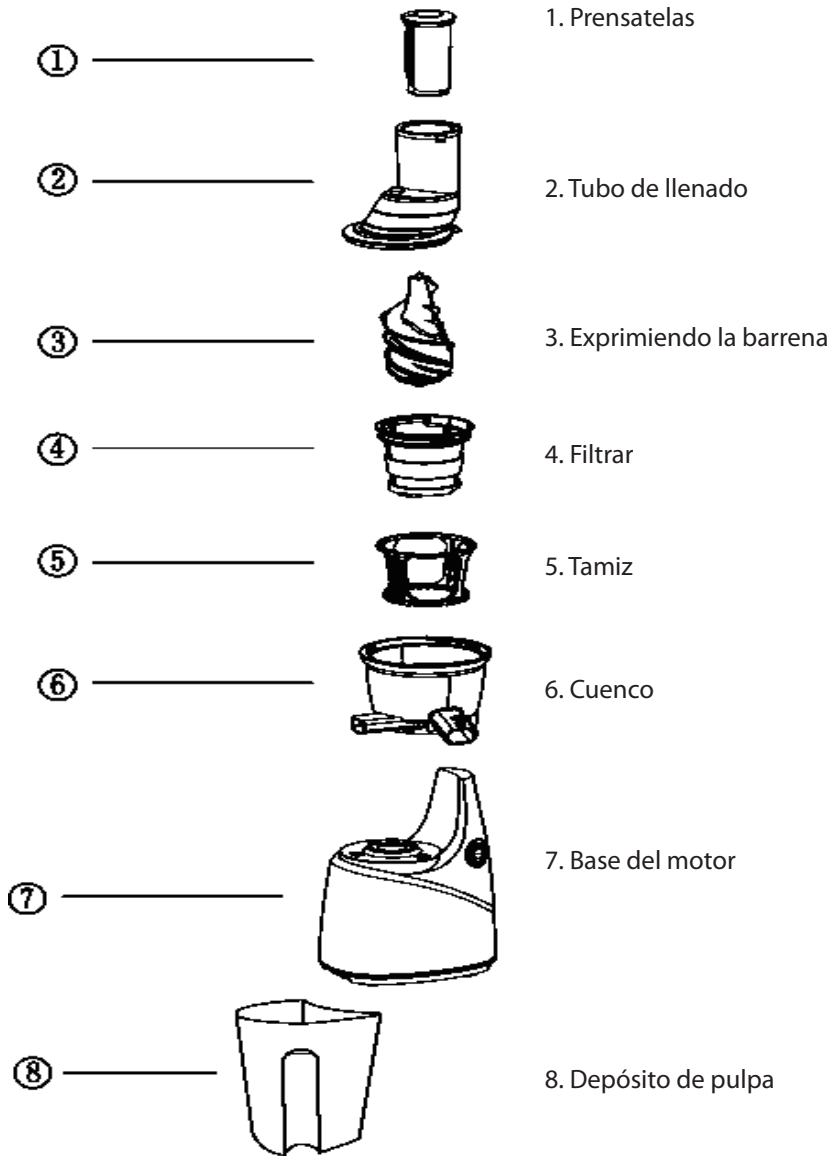

## INSTALACIÓN DEL EXPRIMIDOR

1. Monte el tazón en la base del motor, el tazón debe estar alineado con el mismo punto que la base del motor.
2. Ensamble el colador dentro del bol.
3. Junte el exprimidor y el colador en una sola parte.
4. Ensamble el exprimidor con el colador dentro del recipiente. exprimir mientras empuja hacia abajo hasta que encaje en su lugar. 5. Monte el alimentador en el tazón.
6. Gire el alimentador en el sentido de las agujas del reloj hacia la flecha y luego fíjelo en el punto. Asegúrese de alinear la flecha en el alimentador.
7. Coloque el tapón de pulpa debajo del recipiente. Cierra la tapa cada vez antes de usar. Al limpiar, ábralo y lave las partículas de comida atrapadas.

## INSTALACIÓN DEL EXPRIMIDOR

1. Prepare los ingredientes que se utilizarán. Enchufe la unidad.
2. Presione el botón de avance para operar.  
NOTA: Use el botón de retroceso para empujar los ingredientes hacia arriba y desalojarlos.
3. Inserte los ingredientes preparados uno a la vez.  
NOTA: No es necesario cortar los ingredientes en trozos muy pequeños.
4. Utilice el prensador para presionar los ingredientes hacia el exprimidor.
5. Apague la unidad después de que la pulpa y el jugo estén completamente extraídos.

## Consejos sobre ingredientes

No use los siguientes ingredientes en el exprimidor:

1. Frutas con semillas duras como mango, aguacate, etc.
2. Frutas con piel dura como piña, melón, etc;
3. Frutas congeladas o hielo;
4. Frutas sin contenido de agua.

## LIMPIEZA DEL EXPRIMIDOR

### LIMPIEZA RAPIDA:

Después de cada uso, vierta agua en el tubo de llenado mientras el exprimidor está funcionando. Asegúrese de que el depósito de pulpa esté en su lugar para recoger los desechos de la limpieza.

### LIMPIEZA COMPLETA:

1. Desenchufe el exprimidor de la toma de corriente.
2. Desarme el exprimidor.
3. Lave con agua jabonosa el seguro, el tubo de llenado, el exprimidor, el filtro, colador, cuenco, depósito de pulpa.
4. Enjuague las partes enjabonadas con agua corriente.

First of all, thank you for choosing the SANGKEE SLOW JUICER. Please read this manual carefully before using the device. Please keep the manual for future use. This guide is designed to help you fully maximize the use of the product.


## SPECIFICATIONS

Product Name:	Slow Juicer Plus
Rated Voltage:	120 V AC
Rated Frequency:	60 Hz
Rated Power:	250 W
RPM:	45 rpm
Standard Usage:	Less than 30 minutes continuous

## SAFETY GUIDELINES

- Do not plug in nor unplug with wet hands.
- Do not use other than 220V AC or 110V AC
- Plug the power cord correctly and push it tight in a wall socket.
- Never alter the appliance. Also, do not disassemble or repair by yourself.
- Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- If the supply cord is damaged, it must be replaced by the manufacturer service or similarly qualified person in order to avoid hazard.
- When the power cord, wire was broken or damaged or the plug-in part become loose, do not operate it.
- The motor base can't be immersed in water or any other liquid. Do not operate with wet hands.
- Never disassemble the chamber set during operation or insert fingers, foreign objects such as forks, spoons, etc into filling tube or juice outlet.
- Place the appliance on a flat and stable surface.
- Always unplug the appliance after use. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. When unplugging the power cord, make sure to hold the power cord.
- Make sure all parts are correctly assembled before you switch on the appliance.
- Outdoor use can be dangerous.
- Never let the appliance operate unattended.
- Never reach into the feeder tube with your fingers or any other object while the appliance is working.
- When placing ingredients into the filling tube, only use the presser provided.
- This appliance is intended for household use only.
- The appliance can run for a maximum of 30 minutes nonstop for both soft fruits, such as an apple or pear, and also for tough fruits and vegetables, like carrots. If the appliance suddenly comes to a standstill due to engine overheating, you will have to wait 2 hours before resuming use.

## PARTS OF THE JUICER

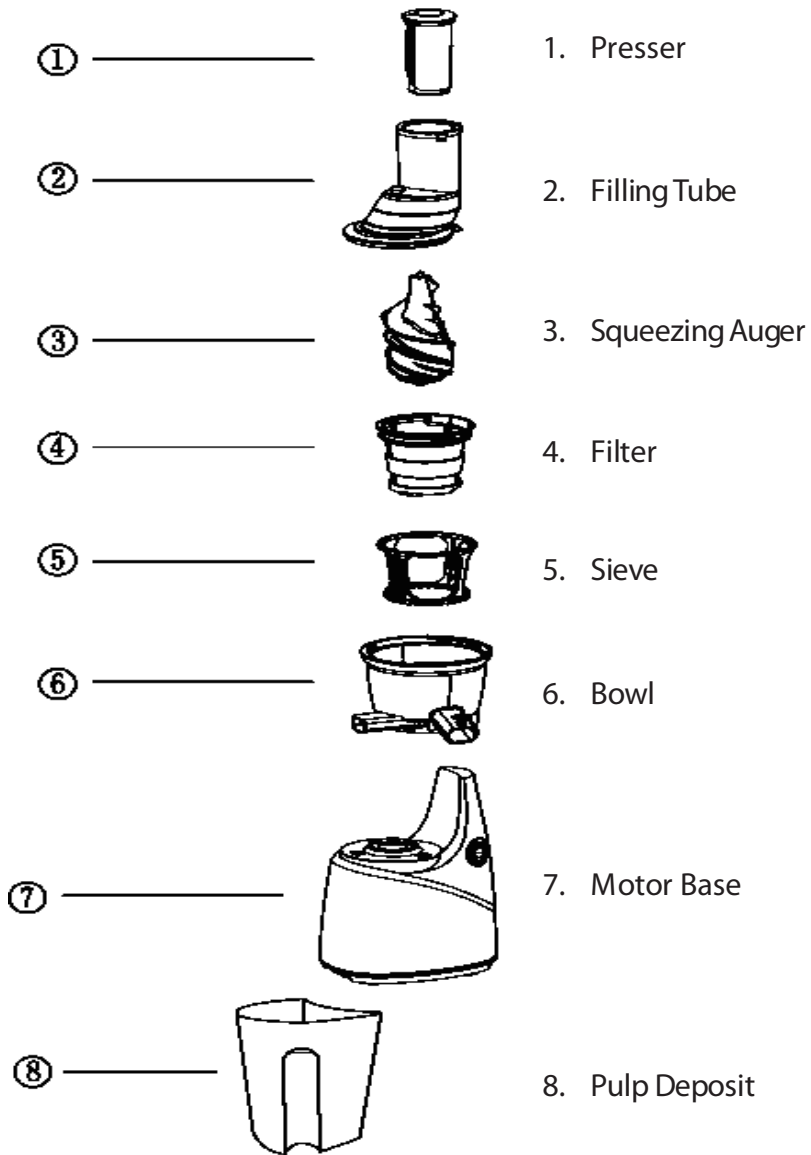

## IN STLLING THE JUICER

1. Assemble the bowl onto the motor base, the bowl must be aligned to the same point as the motor base.
2. Assemble the sieve inside the bowl.
3. Put together the squeezer and the strainer into one part.
4. Assemble the squeezer with the strainer inside the bowl. Rotate the squeezer while pushing down until it falls right into place.
5. Assemble the feeder onto the bowl.
6. Twist the feeder clockwise going to the arrow, and then fix it on the point. Be sure to align the arrow on the feeder.
7. Place the pulp stopper under the bowl. Please close the lid every time before use. When cleaning, open it and wash out the trapped food particles.

## OP ERATING THE JUICER

1. Prepare the ingredients to be used. Plug in the unit.
2. Press the forward button to operate.  
NOTE: Use the reverse button to push the ingredients back up to dislodge them
3. Insert the ingredients prepared one at a time.  
NOTE: The ingredients doesn't need to be cut into very small pieces.
4. Use the presser to press down the ingredients down to the squeezer.
5. Switch off the unit after the pulp and juice are completely extracted.

## Tips On Ingredients

Do not use the following ingredients into the juicer:

1. Fruits with hard seeds such as mango, avocado etc;
2. Fruits with hard skins such as pineapple, melon etc;
3. Frozen fruits or ice;
4. Fruits with no water content.

## CLEANING THE JUICER

### QUICK CLEANING :

After every use, pour water into the filling tube while the juicer is working.  
Make sure that the pulp deposit is in place to catch the wastes from cleaning

### FULL CLEANING :

1. Unplug the juicer from the electric socket.
2. Disassemble the juicer.
3. Wash with soapy water the presser, filling tube, squeezer auger, filter, sieve, bowl, pulp deposit
4. Rinse the soaped parts with running water.